
TYPICAL METER INSTALLATION

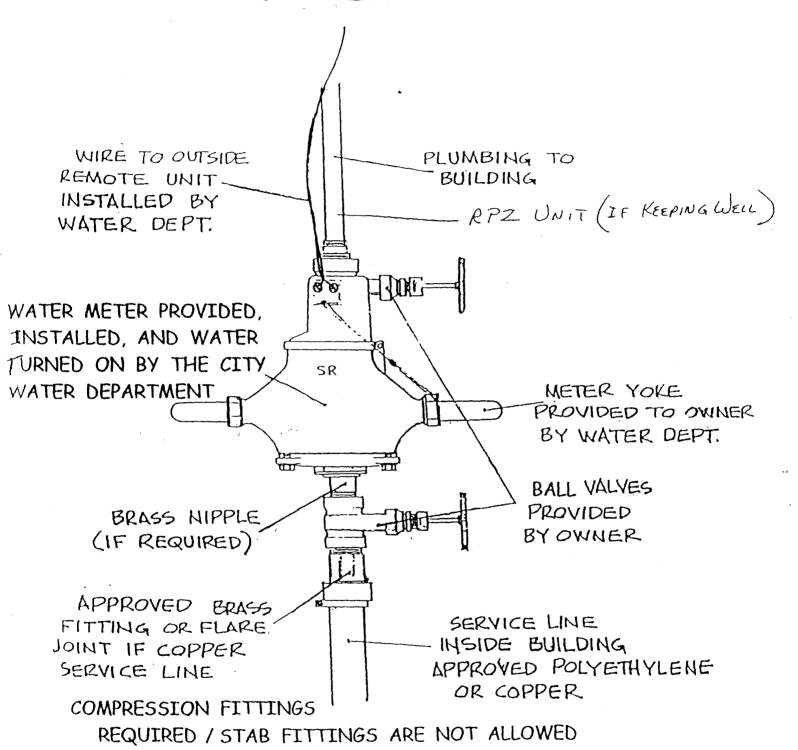

* YOKE ASSEMBLY SHOULD BE STABILIZED
IN A FASHION TO SUPPORT WEIGHT OF
METER AND AVOID VIBRATION ASSOCIATED
WITH WATER SURGES.